

# New Refill Machine Directions

## 1. Insert change or tap Interac/Credit Card

*Exact change no longer required! Machines will give change once start is pressed.*

*When tapping card, please hold your card in front of the reader for a few seconds.  
If card is not held long enough, machine says 'Transaction Cancelled'.*

## 2. Press 'Format' button to select size

## 3. Press 'Start' button to begin filling

The Visa logo, with the word "VISA" in a bold, blue, sans-serif font.

\*Credit/Debit and coin combinations  
not accepted\*

