







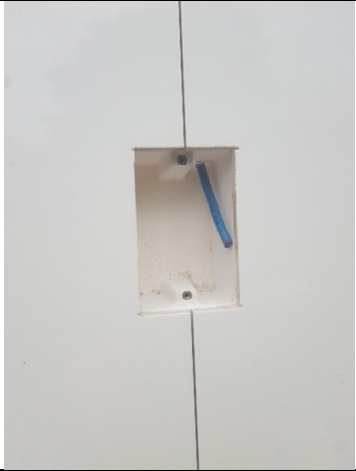
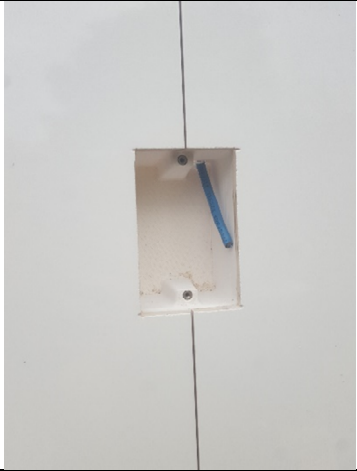


Installation Guide

	
<p>Step 1: Install a plywood noggin, minimum 12mm thick and 300mm in width. Centre the noggin vertically with the intended location of the CAVGUARD and flush with the face of the wall framing</p>	<p>Step 2: Mark the horizontal centreline of the intended CAVGUARD location.</p>
	
<p>Step 3: Mark the vertical centreline of the intended CAVGUARD location.</p>	<p>Step 4: Using the centrelines as a reference, cut a clear opening 106mm high and 72mm wide in the plywood noggin.</p>
	
<p>Step 5: Install wall linings in accordance with the Manufacturers requirements</p>	<p>Step 6: Cut an opening in the wall lining to match the opening in the plywood noggin.</p>

Installation Guide

		
<p>Step 7: If a cable or cables are required to be located within the CAVGUARD, drill a hole within the cable insert zone of the CAVGUARD to suit the cable size.</p>		<p>Step 8: Feed the cable or cables from the wall cavity into the hole drilled in the CAVGUARD and place the within the wall opening.</p>
		
<p>Step 9: Install the CAVGUARD plumb in the wall opening using an appropriate sealant/adhesive to seal and adhere the CAVGUARD to the wall face of the lining.</p>		<p>Step 10: Fix the CAVGUARD plumb in the wall opening with x8 off 7g SS countersunk screws, that are of a suitable length to hold securely in the plywood noggin.</p>
		
<p>Step 11: Seal any cable entries into the CAVGUARD and Waterproofing the wall linings and the CAVGUARD to form a continuous membrane in accordance with the manufacturers instructions. Ensure that the</p>		<p>Step 12: Install wall finishes in accordance with the manufacturer's instructions, cutting an opening of a size so that access to the threaded inserts is maintained and the wall outlet wholly covers the opening once installed</p>

Installation Guide

<p>threaded inserts are kept clear of any membrane</p>	
	
<p>Step 13: Install wall finishes in accordance with the manufacturer's instructions, cutting an opening of a size so that access to the threaded inserts is maintained and the wall outlet covers the opening once installed.</p>	<p>Step 13a: Install wall finishes in accordance with the manufacturer's instructions, cutting an opening of a size so that access to the threaded inserts is maintained and the wall outlet covers the opening once installed.</p>
	
<p>Step 14: Install the wall outlet by using SS machine screws to secure the wall outlet to the CAVGUARD threaded inserts.</p>	<p>Step 14a: Install the wall outlet by using SS machine screws to secure the wall outlet to the CAVGUARD threaded inserts.</p>